

# METRAHIT PM TECH, PM XTRA, EBASE, ETECH, EXTRA Professional Multimeters METRAHIT EU PRO & ESPECIAL Special Multimeters

3-349-454-03

- Digital Hand-Held Multimeters with RMS Measurement amongst other features including:
   V<sub>AC TRMS</sub>, V<sub>AC+DC TRMS</sub>, V<sub>DC</sub>, Hz (V), Hz (A), Ω, V->+, °C/°F (TC)
   Resolution of 60,000 counts, can be changed to 6000 via the
- Resolution of 60,000 counts, can be changed to 6000 via the menu, display illumination can be activated for difficult lighting conditions

#### METRAHIT EBASE (to be discontinued)

 Current measurement via clamp current sensors:
 The transformation factor is adjustable from 1 mV:1 mA to 1 mV:1 A and the factor is calculated for the display.

#### **METRAHIT PM TECH / ETECH**

- Direct Current measurement with increased accuracy and Current measurement, via clamp current transformer and sensors
- Broad range capacitance measurement

#### METRAHIT PM XTRA/PM TECH/EU PRO & METRAHIT EXTRA/ETECH/ESPECIAL

- Special low-impedance alternating voltage measurement (1 MΩ)
- 1 kHz / -3 dB low-pass filter can be activated

#### **METRAHIT PM XTRA / EXTRA**

- Direct current measurement from 10 nA to 10 A, 16 A for short periods
- Temperature measurement with Pt100/Pt1000 resistance thermometer
- Broad range capacitance measurement
- TRMS AC and AC + DC bandwidth 100 kHz

#### METRAHIT EU PRO / METRAHIT ESPECIAL

 Special instrument for the performance of measurements at current transformer circuits

# CAT IV











#### **Applications**

The instruments of the Professional series (E and high resolution series) are extremely rugged, reliable digital multimeters with housings made of impact resistant ABS.

With a resolution of 60,000 counts and up to 26 different measuring functions, they've been developed for professional use.

# Features

#### Three Connector Jacks with Automatic Blocking Sockets (ABS) \*

All current ranges are implemented via a single connector jack which prevents any possibility of operator error. Auto-ranging is available in all current measuring ranges.

Also the automatic blocking sockets prevent incorrect connection of the measurement cables, as well as selection of the wrong measured values. Danger to the user, the instrument and the device under test resulting from operator error is eliminated.

\* Patented (patent no. EP 1801 598, US 7.439,725)

#### **Overload Protection**

The instrument is safeguarded for up to 1000 V in all measuring functions by overload protection. Voltages of greater than 1000 V and current of greater than 10 or 16 A are indicated acoustically. Dangerous contact voltages are indicated when the 1 kHz low-pass filter is activated.

The FUSE display appears at METRAHIT PM XTRA / EXTRA and METRAHIT PM TECH / ETECH instruments in order to indicate that the fuse for the current measuring input has blown.

#### **RMS Value with Distorted Waveshape**

The utilized measuring method allows a waveshape independent RMS measurement (TRMS AC and AC+DC) for voltage and current (METRAHIT PM XTRA / EXTRA up to 100 kHz).

#### Selectable Filter for V AC Measurement

A 1 kHz low-pass filter can be selected if required, for example to measure the motor voltage at electronic frequency converters. The input signal is checked by a voltage comparator for dangerous voltages as long as the low-pass filter is activated. A high-voltage symbol appears at the display if dangerous voltage is present.

#### Measuring 5 V Square-Wave Signals with the METRAHIT PM XTRA / EXTRA

This function allows to test circuits and transmission cables by measuring the frequency and the duty cycle of pulses with amplitudes of 2 to 5 V and frequencies of 100 Hz to 1 MHz.

#### Analog Scale for Quick Trend Display - Bar Graph or Pointer

The analog scale (with additional negative range for zero-frequency quantities) allows for faster recognition of measured value fluctuation than is possible with a digital display. The instrument can be switched back and forth between bar graph and pointer display via the menu.

#### **Automatic or Manual Measuring Range Selection**

Measurement functions are selected by a rotary dial and a function key. The measurement range selection is done automatically according to the input signal. Manual measurement range selection is possible via function key.

#### Measurement with current clamps and sensors

Current clamps and sensors are used for current measurements without interrupting the circuit under test and for high currents above 16 Amps. All E series multimeters offer convenient measurement with current clamps.

The measured current value is automatically calculated for the user with the help of the adjustable clamp factor.

#### **Fast Acoustic Continuity Test**

Testing for short circuit connection and circuit interruption is possible with the selector switch in the  $\P$ ) position. The threshold value for acoustic response can be set to 1, 10, 20 ... 500  $\Omega$  in 10 Ohm steps.

#### Automatic Storage of Measured Values \*

The DATA function automatically saves the digitally displayed measured value after stabilisation in. Acoustic signaling is also used to indicate whether the new measured value deviates from the initial reference value by less or more than 0.1% of the measuring range.

\* Patented

#### Min-Max Data Storage

Comparable to the slave-pointer function of an analog instrument, the device saves the highest and lowest measured values after the MIN/MAX function has been activated or reset. These extreme values can be queried at the display.

#### Battery Charging Status - Power Saving Circuit

The battery charging status is indicated by means of four symbols. The device is switched off automatically if the measured value remains unchanged for a period of between 10 and 59 minutes (adjustable), and if none of the controls are activated during this time. Automatic shutdown can be deactivated by switching the instrument to continuous operation.

The standby mode of the infrared interface can be switched off.

#### **Protective Rubber Holster for Rugged Conditions**

The instrument is protected against damage in the event of impacts or dropping by means of a soft rubber holster with tilt stand and test probe holder. The rubber material also assures that the instrument does not slide if it is set up on a vibrating surface.

#### Infrared Data Interface

The device can be remotely configured, and momentary and stored measurement data can be read out via the bidirectional infrared interface. The USB X-TRA interface adapter and **METRAwin10** software are required (see accessories). Interface protocol and device driver software for LabVIEW<sup>®</sup> (National Instruments<sup>TM</sup>) are available upon request.

#### **DAkkS Calibration Certificate**

Each multimeter is individually adjusted, subjected to final inspection and calibrated. Adherence to the specification is confirmed by means of the included DAkkS calibration certificate, which is valid worldwide (recognized by EA and ILAC. If any type of DMM is due to recalibration (recommended intervals: 1 to 3 years) the multimeters can inexpensively recalibrated at the factory or at any calibration laboratory.

#### **Applicable Regulations and Standards**

IEC/DIN EN 61 010-1 VDE 0411-1	Safety requirements for electrical equipment for measurement, control and laboratory use
DIN EN 61326-1 VDE 0843-20-1	Electrical equipment for measurement, control and laboratory use  - EMC requirements - Part 1: General requirements
DIN EN 60529 DIN VDE 0470-1	Test instruments and test procedures  – degrees of protection provided by enclosures (IP code)

#### **Functional overview**

Function	PM XTRA Extra	PM TECH Etech	EU PRO Especial	EBASE
Voltage $V_{DC}$ (Ri $\geq$ 9 $M\Omega$ )	✓	1	✓	1
$ \begin{array}{l} \text{Voltage V}_{\text{AC}} \text{ TRMS} \\ \text{(Ri} \geq 9 \text{ M}\Omega) \end{array} $	1	1	✓	1
Voltage Lo <sup>1)</sup> $V_{AC}$ TRMS (Ri = 1 $M\Omega$ )	1	1	1	_
Voltage $V_{AC+DC}$ TRMS (Ri $\geq$ 9 M $\Omega$ )	1	1	✓	1
Frequency Hz @ V <sub>AC</sub> or @ Lo <sup>1)</sup> V <sub>AC</sub>	300 kHz	300 kHz	300 kHz	300 kHz
Low-pass filter 1 kHz	@	V <sub>AC</sub> / @ LoV <sub>A</sub>		_
Bandwidth @ V <sub>AC+DC</sub> or V <sub>AC</sub>	100 kHz	20 l	KHZ	1 kHz
Frequency MHz @ 5V TTL	0.1 Hz1 MHz	_	_	_
Duty cycle %	2.0 % 98 %	_	_	_
Voltage level measurement dB	/	/	/	✓
Resistance $\Omega$	1	1	/	✓
Continuity test @ICONST = 1 mA	1	1	1	1
Diode measurement @I <sub>CONST</sub> = 1 mA	1	1	1	1
Temperature measurement °C/°F @T <sub>C</sub>		Typ k	(	
Temperature measurement °C/°F R <sub>TD</sub>	Pt100/	/Pt1000	_	_
Capacitance measurement F	1	1	_	_
Current A <sub>DC</sub>	600 mA/6 mA	60 mA/600 mA		
Current A <sub>AC+DC</sub> TRMS	60 mA/600 mA	6 A/10 A (16 A)	6 A/10 A (16 A)	A >C
Current A <sub>AC</sub> TRMS	6 A/10 A (16 A)	0701071(1079		
Bandwidth @ A <sub>AC+DC</sub> or A <sub>AC</sub>		10 kHz		_
Frequency Hz @ A <sub>AC</sub>		60 kHz		_
Measurement with clamp ammeter with adjustable transfer factor		//A A/A	mV / A A / A	mV / A
Data logger function <sup>2)</sup> (memory)	16 Mbit	_	_	_
Relative value measurement ∆REL	1	/	✓	✓
Zero point ZERO	/	/	/	✓
MIN/MAX/DATA Hold	/	/	/	✓
IR-interface (38.4 kBd)	/	/	/	✓
Power pack connector socket	/	_	_	_
Protective rubber holster	/	/	✓	✓
Fuse	10 A / 1000 V	10 A / 1000 V	_	_
Protection 3)	IP52	IP52	IP52	IP52
Measuring category		V CAT III CAT IV	600 V CAT II	1000 V CAT III 600 V CAT
Calibration	DAkkS	DAkkS	DAkkS	IV DAkkS
	2,	5,	5,	5,5

<sup>1)</sup> Alternating voltage measurement with specially reduced input impedance

#### Included

- 1 multimeter in HC20 hard case
- 1 pair of safety measurement cables with 4 mm test probes, 1000 V CAT III, 600 V CAT IV (KS17-2)
- 2 batteries, 1.5 V, type AA
- 1 DAkkS calibration certificate
- 1 protective rubber holster
- 1 condensed operating instructions\*, English/German
- \* Detailed operating instructions are available for download on the Internet at www.gossenmetrawatt.com

#### Voluntary Manufacturer's Guarantee

36 months for materials and workmanship

1 to 3 years for calibration (depending upon application)

<sup>2) 16</sup> Mbit = 2048 kByte = 61,600 measured values, sampling rate adjustable from 0.1 seconds to 9 hours

<sup>3)</sup> IP 65 available with the METRAHIT OUTDOOR model

#### **Specifications**

Meas.	Managina Danas	Resolutio	n at Upper e Limit	Input Im	pedance	Intrinsic Uncertainty under ±( % rdg. + d)	er Reference Conditions for ±( % rdg. + d)	High Resol 59999 counts ±( % rdg. + d)	Overload	Capacity <sup>2)</sup>
Function	Measuring Range	59 999	5999		~/≂	±( /6 lug. + u)	±( /6 rug. + u) ~ 1)	±( // rug. + u) ≅ 1)	Value	Time
	V ~ 000								_	Tille
	600 mV 6 V	10 μV	100 μV	≥9 MΩ	≥9 MΩ // < 50 pF	0.09 + 5 with ZER0 *) 0.05 + 5	0.5 + 30 0.5 + 9	1 + 30 1 + 30	1000 V	
v	60 V	100 μV	1 mV 10 mV	≥9 MΩ ≥9 MΩ	$\geq$ 9 M $\Omega$ // < 50 pF $\geq$ 9 M $\Omega$ // < 50 pF	0.05 + 5	0.5 + 9	1 + 30	DC	continous
v		1 mV	100 mV		$\geq 9 \text{ M}\Omega // < 50 \text{ pF}$ $\geq 9 \text{ M}\Omega // < 50 \text{ pF}$			1 + 30	AC RMS	Continous
	600 V 1000 V	10 mV 100 mV	1 V	≥9 MΩ ≥9 MΩ	$\geq 9 \text{ M}\Omega // < 50 \text{ pF}$ $\geq 9 \text{ M}\Omega // < 50 \text{ pF}$	0.05 + 5 0.09 + 5	0.5 + 9 0.5 + 9	1 + 30	Sine	
	1000 V	100 1110	I V		reference voltage	0.03 + 3		1 + 30		
				UREF =	0.775 V		Intrinsic Uncertainty			
	600 mV∼				2 dB				1000 V	
	6 V~				+18 dB				DC	
dB	60 V~		0.01 dB	−8 dB.	+38 dB		0.1 dB (U > 10 % MB)		AC	continous
	600 V~				+58 dB				RMS Sine	
	1000 V~				+63 dB		1)		SILIE	
					at upper range limit		~ 1)	≅ 1)		
	<b>€</b> 600 μA	10 nA	100 nA	150 mV	150 mV	0.5 + 5 with ZERO *)	1 + 10	1.5 + 30		
	<b>€</b> 6 mA	100 nA	1 μΑ	200 mV	200 mV	0.5 + 5	1 + 10	1.5 + 30	0.7 A	continous
A	은 등 60 mA	1 μΑ	10 μΑ	200 mV	200 mV	0.1 + 5	1 + 10	1.5 + 30	U.7 A	COHUHOUS
_ ^	<b>≨</b> ≝ 600 mA	10 μΑ	100 μΑ	300 mV	300 mV	0.2 + 5	1 + 10	1.5 + 30		
	<b>트 발 문</b> 룡 6 A	100 μΑ	1 mA	300 mV	300 mV	0.9 + 10	1 + 10	1.5 + 30	10 A: ≤	5 min 10)
	АЩ 000 AM 6 BM 000 AM	1 mA	10 mA	600 mV	600 mV	0.9 + 10	1.5 + 10	1.5 + 30	16 A: ≤	30 s <sup>10)</sup>
	Factor 1:1/10/100/1000	Input		Input im	pedance					
	0.06/0.6/6/60 A	60	) mA		/ESPECIAL PM TECH/ETECH	0	insting one or	s A 🗪	Measur	ing input
A>C	0.6/6/60/600 A	600		Current mea	asuring input	Specif	ication see current range	s A~		ontinous
	6/60/600/6 000 A	6		(A soc	cket (X)	plus cla	mp current transform	ner error		5 min
	2. 22. 230, 0 000 71			PM X I KAVEXTRA, EU PKU/		p.ac ola			1071.	
				,	surement input	Specification see voltage	e measuring ranges V~	1)	Measur	ina input
A>C	0.6/6/60/600 A		) mV		'	opositioation oos voitage	Thousaning ranges v		Measuring input	
~~	6/60/600/6000 A	6	6 V	, ,	(V socket ) $Ri = 1 M\Omega/9 M\Omega$		$\pm (0.5\% \text{ rdg.} + 10 \text{ d})$ $\pm (1\% \text{ rdg.} + 30 \text{ d})$ $\pm ($		1000	V RMS
				EBASE: (V socket ) Ri	~1 MΩ			±(1.5% rdg. + 30 d)		. 10 s
			1	Onon oirquit voltage	Meas. curr. @ range limit	plus clamp current sensor error  ±( % rdg. + d)		enoi	THAX.	. 10 3
	600 Ω	10 mΩ	100 mΩ	< 1.4 V	approx. 250 μA		with active ZERO function*)			
	6 kΩ	100 mΩ	1 Ω	< 1.4 V	approx. 65 μA	0.1 + 5	with active ZENO function )			
	60 kΩ	1 Ω	10 Ω	< 1.4 V	approx. 7.5 μA	0.1 + 5			1000 V	
Ω		10 Ω	100 Ω	< 1.4 V	approx. 0.75 μA	0.1 + 3			DC	
	600 kΩ 6 MΩ	100 Ω		< 1.4 V					AC	max. 10 s
			1 kΩ	< 1.4 V	approx. 0.1 μA	0.5 + 5			RMS	
-43	60 MΩ	1 kΩ	10 kΩ		approx. 30 nA	5 + 10			Sine	
<b>u</b> ())	600 Ω		0.1 Ω	approx. 9 V	approx. 1 mA const.	3 + 5			-	
→	6.0 V <sup>3)</sup>	_	1 mV	approx. 9 V	approx. 1 mA const.	0.5 + 3				
			10 5	Discharge resist.	U <sub>0 max</sub>	±( % ro	g. + d)			
F	60 nF	_	10 pF	10 MΩ	0.7 V	$1 + 10^{-9}$ $1 + 6^{-4}$	with active ZERO function *)		1000 V	
PM XTRA	600 nF	_	100 pF	1 ΜΩ	0.7 V	1+67			DC	
EXTRA	6 μF	_	1 nF	100 kΩ	0.7 V	1 + 6 4)			AC	max. 10 s
РМ ТЕСН	60 μF	_	10 nF	12 kΩ	0.7 V	1 + 6 4)			RMS	
Етесн	600 μF	_	100 nF	3 kΩ	0.7 V	5 + 6 <sup>4)</sup>			Sine	
					f <sub>min</sub> <sup>5)</sup>	±( % rd	g. + d)			
Hz (V)	600.00 Hz	0.01 Hz	0.1 Hz			, ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	- /		Hz (V) 6):	
	6.0000 kHz	0.1 Hz	1 Hz	†	4 11=				Hz(A>C) <sup>6)</sup>	
Hz (A)				†	1 Hz	0.05 + 5	5 8)		:	max. 10 s
Hz (A <b>&gt;</b> €)	60.000 kHz	1 Hz	10 Hz			0.00 1			1000 V	
Hz (V)	300.00 kHz	10 Hz	100 Hz		10 Hz				Hz (A): 7)	
MHz									ү у.	
	00011 1111	0.01 100	0.1		4 400.11	0.05 5	0.1/ 5.1/			
PM XTRA	600 Hz 1 MHz	Hz	1 kHz		1 100 Hz	0.05 + 5	> 2 V 5 V			
EXTRA										
0'	2.0 98 %	_	0.01 %	15 Hz 1 kHz	1 Hz	0.1 R + 5 d	> 2 V 5 V		1000 V	max. 10 s
%						0.2 R per kHz				
PM XTRA	5.0 95 %	_	0.01 %	10 kHz	1 Hz	+ 5 d	> 2 V 5 V			
'	10 00 0/		0.01.0/	EU III-	4 115	0.5 R per kHz	> 2 V = V			
FXTRA	10 90 %	_	0.01 %	50 kHz	1 Hz	+ 5 d	> 2 V 5 V			
EXTRA							g. + d)			
EXTRA						±( % rdg. + d)				
EXTRA	Pt 100 - 200.0					U . C U	0.3 + 15 <sup>9)</sup>			
EXTRA	Pt 100   -200.0 +850.0 °C	;				0.3 + 15	5 9)		1000 V	
	Dt 1000 - 150.0	0.1.00							DC/AC	max. 10 s
	Pt 100	0.1 °C				0.3 + 15 0.3 + 15 1 % + 5	5 9)		1000 V DC/AC RMS Sine	max. 10 s

<sup>1)</sup> Specified accuracy is valid as of 3% of the measuring range. With short-circuited test probes: residual value of 1 to 30 d at zero point due to the TRMS converter (exception: mV AC range, 60 counts). See frequency influence on page 4.

3) Displays up to max. 6.0 V, "OL" in excess of 6.0 V. Applies to measurements at film capacitors and battery operated

d = counts, R = measuring range, rdg. = measured value (reading)

See current measuring ranges for maximum current values.

8) Input sensitivity, sinusoidal signal, 10% to 100% of the measuring range

9) Plus sensor deviation

<sup>2)</sup> At 0 ° ... + 40 °C

<sup>5)</sup> Lowest measurable frequency for sinusoidal measuring signals symmetrical to the zero point 6) Overload capacity of the voltage measurement input: power limiting: frequency x voltage max. 6 x 10<sup>6</sup> V x Hz for U > 100 V

<sup>7)</sup> Overload capacity of the current measurement input:

<sup>10)</sup> Off-time > 30 min and  $T_A \le 40$  °C \*) without ZERO max.  $\pm$  15 digit

#### **Internal Clock**

Time format DD.MM.YYYY hh:mm:ss

Resolution 0.1 s

Accuracy ±1 min. per month

Temperature Influence 50 ppm/K

#### Influencing Quantities and Influence Error

Influencing Quantity	Sphere of Influence	Measured Quantity / Measuring Range 1)	Influence Error (% rdg. + d) / 10 K
		V <del></del>	0.2 + 10
		V ~	0.4 + 10
	-10 °C +21 °C und +25 °C +40 °C	600 Ω 6 MΩ	0.5 + 10
Temperature		> 6 MΩ	1 + 10
		mA/A <del></del>	0.5 + 10
lemperature		mA/A ≂	0.8 + 10
		60 nF 600 μF	1 + 5
		Hz, dB	0.2 + 10
		°C/°F (Pt100/Pt1000)	0.5 + 10
		°C/°F thermocouple K	0.2 + 10

<sup>1)</sup> With zero balancing

									Incertainty <sup>3)</sup> rdg. + d)	
Influenc- ing Qty.			Sphere of Influence	METRAHIT PM XTRA METRAHIT PM TECH METRAHIT EU PRO METRAHIT EXTRA METRAHIT ETECH METRAHIT ESPECIAL	METRAHIT EBASE					
			> 15 Hz 45 Hz	3 + 30	3 + 30					
		600.00 mV	> 65 Hz 1 kHz	2 + 30	3 + 30					
			> 1 kHz 20 kHz	3 + 30	_					
	Vac		> 15 Hz 45 Hz	2 + 9	3 + 9					
		6.0000 V	> 65 Hz 1 kHz	1 + 9	3 + 9					
		600.00 V <sup>2)</sup>	> 1 kHz 20 kHz <sup>4)</sup>	3 + 9	_					
			$>$ 20 kHz 100 kHz $^{4)}$	3.5 + 30	_					
Frequency	CV		> 15 Hz 45 Hz	2 + 9	3 + 9					
' '		1000.0 V <sup>2)</sup>	> 65 Hz 1 kHz	2 + 9	3 + 9					
			> 1 kHz 10 kHz	3 + 30	_					
		600.00 μΑ	> 15 Hz 45 Hz							
	A <sub>AC</sub>	 10.0000 A	> 65 Hz 10 kHz	3 + 10	_					
	A <sub>AC</sub> >C EBASE	600 mV / 6V /	>65 Hz 1 kHz	_	3 + 30					

Power limiting: frequency x voltage max.  $6 \times 10^6 \text{ V} \times \text{Hz}$  for U > 100 V

TRMS converter in the AC and (AC+DC) ranges.

4) METRAHIT PM XTRA / EXTRA: frequency response

frequency response up to 100 kHz, > 50 kHz plus 2.5 %

METRAHIT PM TECH / ETECH: METRAHIT EU PRO / ESPECIAL: METRAHIT EBASE: frequency response up to 20 kHz, frequency response up to 20 kHz, frequency response up to 1 kHz

Influencing Quantity	Sphere of Influence	Measured Quantity/ Measuring Range	Influence Error <sup>5)</sup>
Crest factor CF	1 3	- V ~. A ~	± 1 % rdg.
Crest factor CF	> 3 5	V ∼, A ∼	± 3 % rdg.
<u></u>			

<sup>5)</sup> Except for sinusoidal waveshape

Influencing Quantity	Sphere of Influence	Measured Quantity	Influence Error
	75%		
Relative humidity	3 days	$V, A,  \Omega,  F,  Hz,  dB,  {}^{\circ}C$	1 x intrinsic uncertainty
	instrument off		
Battery voltage	1.8 to 3.6 V	V, A, Ω, F, Hz, dB, °C	Included in intrinsic uncertainty

Influencing Quantity			Damping
	Interference quantity max. 1000 V $\sim$	V <del></del>	> 120 dB
Common Mode Interference		6 V $\sim$ , 60 V $\sim$	> 80 dB
Voltage	Interference quantity max. 1000 V ~ 50 Hz 60 Hz. sine	600 V $\sim$	> 70 dB
	00 112 111 00 112, 01110	1000 V ∼	> 60 dB
Series Mode Interference	Interference quantity: V $\sim$ , respective nominal value of the measuring range, max. 1000 V $\sim$ , 50 Hz 60 Hz, sine	V <del></del>	> 50 dB
Voltage	Interference quantity max. 1000 V —	V ~	> 110 dB

#### **Reference Conditions**

#### **Response Time** (after manual range selection)

Measured Quantity / Measuring Range	Response Time Digital Display	Measured Quantity waveshape
V <del></del> , V ∼, dB AV <del></del> , A ∼	1.5 s	From 0 auf 80 % of upper range limit value
600 Ω 6 MΩ	2 s	
60 MΩ	5 s	
Continuity	< 50 ms	From ∞ auf 50 % of upper range limit value
°C (Pt 100)	Max. 3 s	or appearing minicipates
→	1.5 s	
60 nF 600 μF	Max. 2 s	From 0 auf 50 %
>10 Hz	1.5 s	of upper range limit value

#### **Data Interface**

Type

Data transmission

Optical via infrared light through the housing Serial, bidirectional (not IrDa compatible)

Protocol
Baud rate

Device specific 38,400 baud

Functions

- Select/query measuring functions

and parameters

- Query momentary measurement data

- Read out stored measurement data

The USB X-TRA plug-in interface adapter (see accessories) is used for connection to the PC's USB port.

# Internal Measured Value Storage (METRAHIT PM XTRA / EXTRA only)

Memory capacity 16 MBit (2 MByte) for approx. 61,000 measured values with date and time stamp

The accuracy specification for frequency response is valid within a display value range of 10% to 100% of the measuring range for both measuring modes with the TRMS convertor in the AC and (AC LDC) ranges

#### **Power Supply**

Battery 2 ea. 1.5 V mignon cell (2 ea. size AA),

alkaline manganese per IEC LR6 (2 ea. 1.2 V NiMH rechargeable battery

also possible)

Service life with alkaline manganese: approx. 200 hours

Battery test Battery capacity display with battery

symbol in 4 segments: ......

Querying of momentary battery voltage via

menu function.

Power OFF function Multimeter is switched off automatically:

 If battery voltage drops to below prox. 1.8 V
 If none of the keys or the rotary switch are activated for an adjustable duration

of 10 to 59 minutes, and the multimeter is not in the continuous operation mode

Power pack socket (METRAHIT PM XTRA/ EXTRA only)

If the NA X-TRA power pack has been plugged into the instrument, the batteries

are disconnected automatically.

Rechargeable batteries can only be

recharged externally.

#### **Display**

LCD panel (65 mm x 36 mm) with analog and digital display including unit of measure, type of current and various special functions

#### **Background illumination**

Background illumination is switched off approximately 1 minute after it has been activated.

Analog

Display LCD scale with bar graph or pointer, depend-

ing on the selected parameter setting

Scaling With 4 division lines each, 1 bar/pointer cor-

responds to 500 counts at the digital display

Polarity display With automatic switching

Overflow display With the > symbol

Measuring rate 40 measurements per second and display

refresh

Digital

Display / char. height 7-segment characters / 15 mm

Resolution 59,999 counts

Overflow display "OL" is displayed for ≥ 60,000 counts

Polarity display "-" (minus sign) is displayed if plus pole is connected to " $\bot$ "

Measuring rate 10 or 40 measurements per second with

the Min-Max function except for the capacitance, frequency and duty cycle

measuring functions

Refresh rate 2 times per sec., every 500 ms

#### **Acoustic Signals**

For voltage Intermittent signal at above 1000 V
For current Intermittent signal at above 10 A
continuous signal at above 16 A

# Fuse for METRAHIT PM XTRA / EXTRA, METRAHIT PM TECH / ETECH

Fuse FF (UR) 10 A/1000 V AC/DC;

10 mm x 38 mm,

Switching capacity: 30 kA at 1000 V AC/DC, protects the current measurement input in the 600  $\mu$ A through 10 A ranges

#### **Electrical Safety**

Per IEC 61010-1:2010/VDE 0411-1:2011

### METRAHIT PM XTRA / EXTRA, METRAHIT PM TECH / ETECH, METRAHIT EBASE

Safety class II

Measuring category III IV
Operating voltage 1000 V 600 V

Pollution degree 2
Test voltage 6.7 kV~

METRAHIT EU PRO / METRAHIT ESPECIAL "for Current Transformers"
Special device for measurements at current transformers without

fuse in the electrical circuit Safety class II

Measuring category 600 V CAT II

Pollution degree 2
Test voltage 3.5 kV~

#### **Electromagnetic Compatibility (EMC)**

Interference emission EN 61326-1: 2013, class B

Interference immunity EN 61326-1: 2013

EN 61326-2-1: 2013

#### **Ambient Conditions**

Accuracy range  $0 \, ^{\circ}\text{C} \dots +40 \, ^{\circ}\text{C}$ Operating temp. range  $-10 \, ^{\circ}\text{C} \dots +50 \, ^{\circ}\text{C}$ 

Storage temp. range -25 °C ... +70 °C (without batteries) Relative humidity Max.75%, no condensation allowed

Elevation To 2000 m

Deployment Indoors, except within specified ambient

conditions

#### **Mechanical Design**

Housing Impact resistant plastic (ABS)

Dimensions 200 x 87 x 45 mm

(without protective rubber holster) Approx. 0.35 kg with batteries

Weight Approx. 0.35 kg with batteries
Protection Housing: IP 52 (pressure equalization by

means of the housing)

Table excerpt regarding significance of the

IP code

IP XY (1 <sup>st</sup> digit X)	Protection against pene- tration of solid particles	IP XY (2 <sup>nd</sup> digit Y)	Protection against penetration by water
5	Dust protected	2	Dripping (15° inclination)

#### Accessories for Operation at a PC

#### Interface Adapter for USB Connection

The following functions can be executed with the USB X-TRA bidirectional interface adapter:

- Configure the **METRAHIT** Multimeter from a PC.
- Transmit live measurement data to the PC.
- Read out data from memory at the METRAHIT PM XTRA / EXTRA.

The adapter does not require a separate power supply. Its baud rate is 38,400 baud.

A CD ROM is included which contains current drivers for Windows operating systems.





Application example

#### METRAwi®10/METRAHit® Software

METRAwin®10/METRAHit® PC software is a multilingual, measurement data logging program for recording, visualizing and documenting measured values of multimeters of the METRAHIT Advanced and Professional as well as the METRAHIT A and E Series.

Communication between the PC and the measuring instrument(s) is established via available interface adapters.

Depending upon device type, one or several of the following operating modes are possible:

#### Device Configuration

Remote configuration and querying of device-specific functions and parameters, for example measuring function, measuring range and memory parameters. Frequently used device settings can be saved to configuration files for easy recall.

#### • Online Recording of Measurement Data

Read-in, display and recording of momentarily measured data from the interconnected device.


- Number of
  - measuring channels up to 10
- Start recording
- manual, triggered by measured value, time triggered
- Recording mode
- > time controlled with sampling interval of 0.05 s\* ... 1 s ...
- 60 min > manually controlled
- > measured value controlled in event of exceeded limit/delta value
- Recording duration max. 10 million intervals
- \* Depending upon device type, measuring function, number of measuring channels and communication (e.g. via modem), sample intervals of less than 1 s cannot be used.

#### • Reading Out and Visualizing Stored Data


If supported by the device: read-in and display of offline data recorded to device memory.

For purposes of analysis, data recorded online or read in from the device's memory can be displayed in various formats:

# Y(t)-recorder display for up to 6 channels

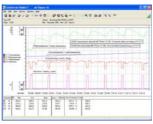

### XY-recorder display for up to 4 channels

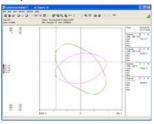

### Multimeter-display for up to 4 channels



Tabular display for up to 10 channels



#### System Requirements

METRAwin 10 (as of version 6.20) can be run on PCs, notebooks and tablets with Microsoft Windows<sup>®</sup> Vista, 7, 8 or 10.

#### **Order Information**

Designation	Туре	Article Number
METRAHIT PM XTRA, METRAHIT PM		
METRAHIT ETECH, METRAHIT ESPECIAL	and METRAHIT EBA	ASE multimeters
60,000 counts TRMS multimeter with dire (TRMS values), frequency measurement, romeasurement and temperature measurement characters, analog bar graph and backgrom Measuring categories: 600 V/CAT IV, 1000 Current measurement via clamp sensors v All multimeters include the KS17-2 measu condensed operating instructions, CD ROM	esistance measurement with type K thermound illumination  O V/CAT III  with voltage output and prement cable set, two	nt, continuity test, diode couples LCD with 15 mm I adjustable clamp factor mignon batteries,
Same as above but with direct, alternating and pulsating current measurement (TRMS values), additional broad range capacitance measurement, precision temperature measurement with Pt100 or Pt1000 platinum resistance thermometers, frequency and duty cycle measurement, clamp current transformer with current output, with power pack socket and IR interface, 2 MB data memory, protective rubber holster	METRAHIT PM XTRA	M250A
Same as above but with direct, alternating and pulsating current measurement (TRMS values), additional broad range capacitance measurement, with additional current measurement via clamp current transformer with current output	METRAHIT PM TECH	M253A
Same as above Special device without integrated fuse for use in current transformer circuits	METRAHIT EU PRO	M252A
Accessories for operation at a PC		
IR-USB bidirectional interface adapter	USB X-TRA	Z216C
METRAwin 10 software	METRAwin 10	GTZ3240000R0001
Accessories for temp. measurement with EXTRA only)	resistance thermome	ter (METRAHIT PM XTRA /
Pt100 temperature sensor for surface and immersion measurement, -40 to +600 °C	Z3409	GTZ3409000R0001
Pt1000 temperature sensor for measurement in gases and liquids, -50 to +220 °C	TF220	Z102A
Pt100 oven sensor, -50 to +550 °C	TF550	GTZ3408000R0001
Ten adhesive Pt100 temperature sensors, -50 to +550 °C	TS Chipset	GTZ3406000R0001
Replacement fuse (METRAHIT PM XTRA	A / Extra and METRA	HIT PM TECH / ETECH only)
Fuses (pack of 10)	FF (UR) 10 A / 1000 V AC/DC	Z109L
Power pack (for METRAHIT PM XTRA / METRAHIT EXTRA only)	NA X-TRA	Z218G
Protective rubber holster and carrying strap	GH X-TRA	Z104C

#### **Transport Accessories**

#### HitBag Cordura Belt Pouch

For **METRA HIT**— multimeters (with/without protective rubber holster) and METRAport



#### **HC30 Hard Case**

For two multimeters (with/without protective rubber holster) and accessories



F836 Ever-Ready Case For multimeter and accessories



#### **F829 Carrying Pouch** For multimeters (with/without protective rubber holster) and accessories



Designation	Туре	Article Number
Imitation leather without protective rubber holster for <b>METRA HIT</b> — and METRAmax	F829	GTZ3301000R0003
Cordura belt pouch for <b>METRA HIT</b> — multimeters and METRAport	HitBag	Z115A
Imitation leather ever-ready case with cable compartment	F836	GTZ3302000R0001
Ever-ready case for 2 METRA HIT—, 2 adapters and accessories	F840	GTZ3302001R0001
Hard case for one <b>METRA HIT</b> — and accessories	HC20	Z113A
Hard case for two METRA HIT— and accessories	HC30	Z113A

For additional information regarding accessories please refer to:

- our Measuring Instruments and Testers catalog.
- our website www.gossenmetrawatt.com

Current Measuring Accessories All current sensors and transformers are equipped with a terminal with 4 mm safety banana plugs									Suitable for METRA HIT—	
Туре	Designation	Measuring Range	Meas. Category	Max. Wire Dia.	Transformation Factor	Frequency Range	Intrinsic Uncertainty ±(% rdg. +)	Article Number	EBASE	PM TECH PMXTRA EU PRO ETECH EXTRA ESPECIAL
DC/AC Cur	rrent Sensors with Voltage Ou	tput								
CP30	DC/AC current clamp sensor, with battery mode (30 h)	5 mA to 30 A (DC / AC pk)	300 V / CAT III	25 mm	100 mV/A	DC20 kHz (-3 dB)	1 % +2 mA	Z201B	•	•
CP330	DC/AC current clamp sensor, with 2 measuring ranges, battery mode (50 h)	Range: 0.5 30 A Range: 5 300 A (DC / AC rms)	300 V / CAT III	25 mm	10 mV/A; 1 mV/A	DC20 kHz (-3 dB)	1 % + 50 mA 1 % + 100 mA	Z202B	•	•
CP1100	DC/AC current clamp sensor, with 2 measuring ranges, battery mode (50 h)	Range: 0.5 100 A Range: 5 1000 A (DC / AC rms)	300 V / CAT III	32 mm	10 mV/A; 1 mV/A	DC20 kHz (-1 dB)	1 % + 100 mA 1 % + 500 mA	Z203B	•	•
CP1800	DC/AC current clamp sensor, with 2 measuring ranges, battery mode (50 h)	Range: 0.5 125 A Range: 5 1250 A (DC / AC rms)	300 V / CAT III	32 mm	10 mV/A, 1 mV/A	DC 20 kHz (-1 dB)	1% + 100 mA 1% + 500 mA	Z204A	•	•
AC Curren	t Sensors with Voltage Output									
WZ12B	AC clamp current sensor	10 mA~ 100 A~	300 V CAT III	15 mm	100 mV/A	<u>45 65</u> 500 Hz	1.5% +0.1 mA	Z219B	•	•
WZ12C	AC clamp current sensor, with 2 measuring ranges	1 mA~ 15 A~, 1 150 A~	300 V CAT III	15 mm	1 mV/mA, 1 mV/A	<u>45 65</u> 400 Hz	3% + 0.15 mA, 2% + 0.1 A	Z219C	•	•
WZ11B	AC clamp current sensor, with 2 measuring ranges	0.5 20 A~, 5 200 A~	600 V CAT III	20 mm	100 mV/A, 10 mV/A	30 <u>48 65</u> 500 Hz	1 3%	Z208B	•	•
Z3512A	AC clamp current sensor, with 4 measuring ranges	1 mA 1/10/100/ 1000 A~	600 V CAT III	52 mm	1 V/A, 100 mV/A, 10 mV/A, 1 mV/A	10 <u>48 65</u> 3 kHz	0.5 3%, 0.2 1%	Z225A	•	•
METRA- FLEX3000	Flexible AC current sensor with 3 measuring ranges, battery mode (2000 h)	0,5 30 A, 0,5 300 A, 5 3000 A	1000 V CAT III 600 V CAT IV	176 mm	100 mV/A, 10 mV/A, 1 mV/A	10 Hz 20 kHz	1% + 0.1 A 1% + 0.1 A 1% + 1 A	Z207E	•	•
METRA- FLEX300M	Flexible AC miniature current sensor with 3 measuring ranges, battery mode (150 h)	1 3 A, 1 30 A, 5 300 A	1000 V CAT III 600 V CAT IV	50 mm	1 V/A, 100 mV/A, 10 mV/A	20 Hz 100 kHz	1% + 0.2 A 1% + 0.2 A 1% + 1 A	Z207M	•	•
AC Curren	t Transformer with Current Ou	itput								
WZ12A	AC clamp current transformer	15 180 A~	300 V CAT III	15 mm	1 mA/A	<u>45 65</u> 400 Hz	3%	Z219A	_	•
WZ12D	AC clamp current transformer	30 mA 150 A~	300 V CAT III	15 mm	1 mA/A	<u>45 65</u> 500 Hz	2.5% +0.1 mA	Z219D	_	•
WZ11A	AC clamp current transformer	1 200 A~	600 V CAT III	20 mm	1 mA/A	<u>48 65</u> 400 Hz	1 3%	Z208A	_	•
Z3511	AC clamp current transformer	4 500 A~	600 V CAT III	30 x 63 mm	1 mA/A	<u>48 65</u> 1 kHz	3% +0.4 A	GTZ35110 00R0001		•
Z3512	AC clamp current transformer	0.5 1000 A~	600 V CAT III	52 mm	1 mA/A	30 <u>48 65</u> 5 kHz	0.5% 0.7%	GTZ35120 00R0001	_	•
Z3514	AC clamp current transformer	1 2000 A ~	600 V CAT III	64 x 150 mm	1 mA/A	30 <u>48 65</u> 5 kHz	0.5% +0.1 A	GTZ35140 00R0001	_	•
	istors for Multimeters withou	•								
NW300mA	A Plug-in shunt resistor, encapsulated 1 $\Omega$	0 300 mA	300 V CAT III	_	1 mV/mA	DC10 kHz	0.5%	Z205C	•	•
NW3A	Plug-in shunt resistor, encapsulated 0,1 $\Omega$	0 3 A	300 V CAT III	_	100 mV/A	DC10 kHz	0.5%	Z205B	•	•

 $<sup>\</sup>bullet$  with adjustable transformation factor 1: 1 / 10 / 100 / 1000

Edited in Germany • Subject to change without notice • PDF version available on the Internet

